

Look for EarthWay® or EV-N-SPRED® models on the bag for settings. If there is none listed, please use the comparison chart below as a guide to estimate your spreader setting. These settings are approximate and intended as a guide only.

Variations in physical characteristics of material applied, walking speed and surface roughness may require slightly different spreader settings. Due to the above conditions, the manufacturer makes no warranty as to the uniformity of coverage actually obtained from settings listed.

## FLEX-SELECT® BROADCAST SPREADER SETTING MATRIX

### GRANULAR MATERIAL

#### Standard-Output Red Tray

Grams PER Square Meter	Fine/Small → (SAND)			Medium → (HALF BB)			Large → (BB)			EXTRA LARGE → ROCK SALT		
	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS
5	7	18	5.5	9	24	7.3	14	36	11.0	17	37	11.3
10	10	18	5.5	13	24	7.3	18	36	11.0	22	37	11.3
15	13	18	5.5	16	24	7.3	23	36	11.0	24	37	11.3
20	14	18	5.5	20	24	7.3	27	36	11.0	26	37	11.3
24	16	18	5.5	22	24	7.3	30	36	11.0	28	37	11.3
29	18	18	5.5	25	24	7.3	23 x 2 pass	36	11.0	29	37	11.3
34	20	18	5.5	27	24	7.3	25 x 2 pass	36	11.0	30	37	11.3
39	22	18	5.5	28	24	7.3	27 x 2 pass	36	11.0	26 x 2 pass	37	11.3
44	24	18	5.5	30	24	7.3	28 x 2 pass	36	11.0	27 x 2 pass	37	11.3
49	26	18	5.5	22 x 2 pass	24	7.3	30 x 2 pass	36	11.0	28 x 2 pass	37	11.3

### GRASS SEED

Grams PER Square Meter	FINE		COARSE			
	SETTING	SPREAD WIDTH FT	SETTING	SPREAD WIDTH FT		
10	14	8	2.4	22	14	4.3
15	16	8	2.4	25	14	4.3
20	18	8	2.4	28	14	4.3
25	20	8	2.4	30	14	4.3

**Calibration:** Start by ensuring that your spreader calibration is correct. Make sure the drop holes in the **Standard-Output Tray** are fully open when the Rate Control handle is on #30. If not, please adjust control rod at the pivot to allow for a full open hopper holes with the handle at position at #30.

### GRANULAR MATERIAL

#### Low-Output Black Tray

Grams PER Square Meter	Fine/Small → (SAND)			Medium → (HALF BB)			Large → (BB)			EXTRA LARGE → ROCK SALT		
	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS
5	8	16	4.9	10	20	6.1	15	30	9.1	18	24	7.3
10	10	16	4.9	13	20	6.1	18	30	9.1	20	24	7.3
15	12	16	4.9	18	20	6.1	23	30	9.1	25	24	7.3
20	13	16	4.9	20	20	6.1	28	30	9.1	27	24	7.3
24	16	16	4.9	22	20	6.1	30	30	9.1	30	24	7.3
29	18	16	4.9	25	20	6.1	23 x 2 pass	30	9.1	25 x 2 pass	24	7.3
34	20	16	4.9	27	20	6.1	25 x 2 pass	30	9.1	26 x 2 pass	24	7.3
39	21	16	4.9	29	20	6.1	28 x 2 pass	30	9.1	27 x 2 pass	24	7.3
44	23	16	4.9	30	20	6.1	29 x 2 pass	30	9.1	29 x 2 pass	24	7.3
49	24	16	4.9	22 x 2 pass	20	6.1	30 x 2 pass	30	9.1	30 x 2 pass	24	7.3

### GRASS SEED

Grams PER Square Meter	FINE		COARSE			
	SETTING	SPREAD WIDTH FT	SETTING	SPREAD WIDTH FT		
10	15	9	2.7	21	15	4.6
15	18	9	2.7	24	15	4.6
20	21	9	2.7	27	15	4.6
25	24	9	2.7	30	15	4.6

**Calibration:** Start by ensuring that your spreader calibration is correct. Make sure the drop holes in the **LOW-OUTPUT TRAY** are fully closed when the Rate Control Handle is resting on the **stop #0**. If not, please adjust control rod at the pivot to ensure the shut-off is fully closed with the handle at position at #0. Move the spreader slightly to confirm the calibration because of the cam.

### GRANULAR MATERIAL

#### High-Output Blue Tray

Grams PER Square Meter	Fine/Small → (SAND)			Medium → (HALF BB)			Large → (BB)			EXTRA LARGE → ROCK SALT		
	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS	SETTING	SPREAD WIDTH FT	SPREAD METERS
5	3	16	4.9	5	22	6.7	7	28	8.5	8	26	7.9
10	5	16	4.9	6	22	6.7	10	28	8.5	11	26	7.9
15	6	16	4.9	8	22	6.7	12	28	8.5	13	26	7.9
20	7	16	4.9	9	22	6.7	14	28	8.5	14	26	7.9
24	8	16	4.9	11	22	6.7	15	28	8.5	15	26	7.9
29	10	16	4.9	13	22	6.7	17	28	8.5	16	26	7.9
34	11	16	4.9	15	22	6.7	20	28	8.5	17	26	7.9
39	12	16	4.9	16	22	6.7	21	28	8.5	18	26	7.9
44	13	16	4.9	17	22	6.7	23	28	8.5	19	26	7.9
49	14	16	4.9	18	22	6.7	24	28	8.5	21	26	7.9

### GRASS SEED

Grams PER Square Meter	FINE		COARSE			
	SETTING	SPREAD WIDTH FT	SETTING	SPREAD WIDTH FT		
10	7	10	3.0	11	15	4.6
15	9	10	3.0	14	15	4.6
20	11	10	3.0	16	15	4.6
25	13	10	3.0	18	15	4.6

**Calibration:** Start by ensuring that your spreader calibration is correct. Make sure the drop holes in the **HIGH-OUTPUT TRAY** are fully closed when the Rate Control Handle is resting on the **stop #0**. If not, please adjust control rod at the pivot to ensure the shut-off is fully closed with the handle at position at #0. Move the spreader slightly to confirm the calibration because of the cam.